

Installation setting:

[2412]:Reset default setting

[2413]:Enter into testing mode(carrying out 2412 at the same time)

[2414]: Enter into aging mode

[2499]: Factory reset

[2810]: Updating UI

[2811]: Updating program

[2812]: Updating ring

[2813]: Format SD Card

[2910]: Broadcast namelist

[3006~3600]: Set the memory play time

[8000]: Set as master Unit 0

[8001~8003]: Set as Slaver Unit 1~3

[8004]: Set as guard Unit

[8005]: Set as not guard Unit

[8006]: Panel on as slaver called

[8007]: Panel off

[8008]:Set the RTC display format to MM/DD/YYYY

[8009]:Set the RTC display format to DD/MM/YYYY

[8010]: Set lock mode to 0

[8011]: Set lock mode to 1

[8012]:Set the time format to 12H

[8013]:Set the time format to 24H

[8014]: Unlock menu on

[8015]: Unlock menu off

[8016]: Bypass enable

[8017]: Bypass disable

[8018~8020]:Video select standard Auto/PAL/NTSC

[8040~8050]: Choose call waiting indicator light

[8051~8055]: Choose standby indicator light

[8200~8231]:Local address set as 0~31

[8300~8301]:Auto rec ON/OFF

[8302~8303]:Manual rec ON/OFF

[8401~8499]: unlock time set 1-99s

[9004~9005]: use unified door station tune or set separately

[9006~9007]: unlock warning on/off

[9008~9010]: Choose ringtone resources

[9011~9012]: Choose namelist arrangement

[9013]:Key touch sound

[9014]:Key touch sound disable

[9015]:Intercom call enable

[9016]: Intercom call disable

[9017~9019]:adjust touch sensitivity