

SR Series


# Selective Ring Processor

Online Operating  
Instructions




[www.multi-link.net](http://www.multi-link.net)

# The SR 2™

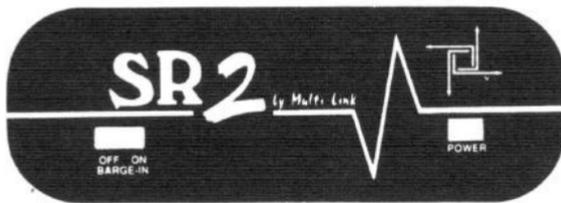

FRONT

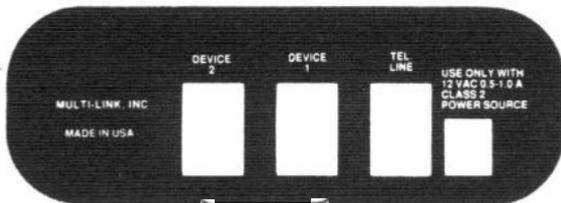

REAR

1

2


3

4


5

- 1) Barge-In Protection Switch    2) Power Indicator Light    3) Device Ports  
4) Telephone Line Connector Port    5) 12 Volt AC Power Input

# The SR 3™

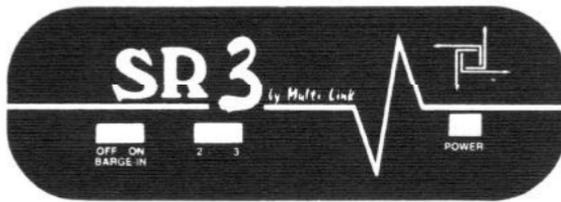

FRONT

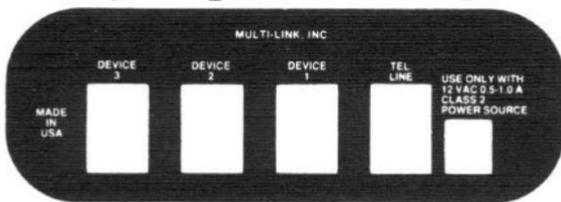

REAR

1

2

3

4

5

6

- 1) Barge-In Protection Switch    2) Device Port Select Switch    3) Power Indicator Light  
4) Device Ports    5) Telephone Line Connector    6) 12 Volt AC Power Input

---

# Contents



<b>1 Introduction/ How the SR Call Processor Works .....</b>	<b>2</b>
<b>2 Features and Applications .....</b>	<b>4</b>
<b>3 Safety Instructions .....</b>	<b>6</b>
<b>4 Installation .....</b>	<b>8</b>
<b>5 Single Line Installation</b>	
A. Simple Plug In .....	11
B. Wiring Modifications .....	12
C. Installation with Adapters .....	14
D. Partial Supervision with One SR .....	15
E. Total Supervision with Multiple SR's .....	17
<b>6 Multiple Line Installation</b>	
A. Before a Key System .....	18
B. RJ-14 Two Line System .....	19
<b>7 Commonly Asked Questions .....</b>	<b>20</b>
<b>8 Appendix</b>	
Recommended Parts and Materials .....	22
Technical Specifications .....	23
FCC Registration .....	23

# Introduction/How the SR Call Processor Works

# 1

Congratulations! You are now the owner of the highest quality Selective Ring Call Processor on the market – The SR series.

We at **Multi-Link** value you as a customer and have provided you with this manual and a Warranty Registration Card. Please read the manual carefully and be sure to fill out all the information requested on your warranty card. Should you need technical assistance, please call our Technical Support department at 800-535-4651. Thank you for selecting Multi-Link for your communications management needs.

## A Word About the “Distinctive Ring Service”

Your local telephone company has provided you with an inexpensive “Distinctive Ring” service which increases your communications capability. The service goes by different names depending on the telephone company -**Custom Ringing** by U.S. West, **Smart Ring** by GTE, **Ring Master** by Bell South, **Ring Mate** by NYNEX, **Personalized Ringing** by Southwestern Bell, **Call Identification Service** by Ameritech, **Ident-a Ring** by Bell Atlantic, etc. These services all work in the same manner. Two, and sometimes three, different numbers can be requested from the phone company. The numbers ring through a single line coming into the business or residence and each number can be distinguished by the pattern of the ring. These ring patterns are made up of various combinations of ring bursts. Examples of the different ring patterns would be:

Original Number	1 Regular Ring
Second Number	2 Short Rings
Third Number	3 Rings (Shorts and Longs)

---

## How The SR Call Processor Works

The SR Call Processor counts the number of bursts in the ring pattern of the telephone number called. It then directs the call to one of the numbered device ports at the rear of the unit. The device ports are output jacks that connect your phone devices (phones, MODEMS, FAX, answering and dictation machines) to the SR Call Processor. When you have attached the phone devices you wish to use, the SR Call Processor routes each different ring pattern (i.e. telephone number) to a specific phone device **without ringing other phones on the same line.**

Example:

Ring Pattern	Port	Devices Used (examples)
Original Number	Device 1	Telephones
Second Number	Device 2	FAX
Third Number	Device 3	Computer Modem (SR3 only)

# Features and Applications

# 2

There are many applications for your SR Call Processor in the home or small business. To optimize the phone configuration that is best for you, it is important to understand the features available from your SR Call Processor.


## FEATURES

**Exclusion Feature** — Both SR models have an exclusion feature which allows you to control line accessibility between your phone devices. This feature can be activated by the protection switch labeled “**Barge-In**” on the front panels of the SR2 and SR3. (See inside front cover for end-panel view).

- 1) “**Barge-In**” Protection On — This setting enables you to protect phone conversations and data transmissions from being interrupted by other phone devices on the same line. When extensions are picked up a busy signal will be heard.
- 2) “**Barge-In**” Protection Off — This setting allows you to answer any incoming call from any extension in the home or business. In addition, you can conference any call from any extension.

**Surge Protection** — This feature is standard for both the SR2 and SR3. Harmful voltage spikes will be carried to the earth ground through the SR’s internal surge suppression network when the SR is properly installed.

**2/3 Port Select Switch** [SR3 only] — This switch allows you to configure your SR3 to operate with either 2 or 3 numbers. In the “2” position, calls will ring through to Device 2 in the shortest possible time. If you have 3 numbers, the switch must be set in the “3” position.

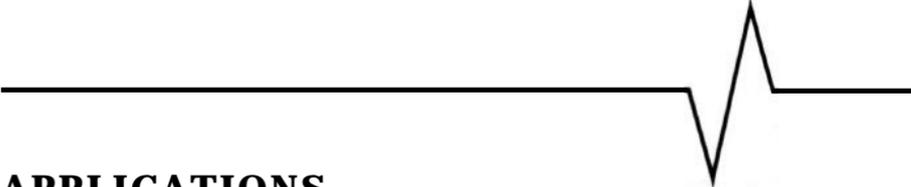

## APPLICATIONS

The advantage of call routing is to allow you the capability of upgrading or modifying your communications network as your needs change. Here are a few applications you may consider.

**In The Home** — With your SR Call Processor, you can now assign any phone device in your home its own individual telephone number. Your children, spouse or roommate can now have calls routed to their personal phones without ringing other phones in the house.

**Home Office** — In the home office application, it is important for each phone number to be routed without ringing other phone devices in the house. The SR Call Processor will route the phone numbers you have assigned to your phone/office equipment to those particular devices. You may choose to have one number for your family phone, one for your business phone, and if you have a FAX and/or MODEM, one for these. The routing process is completely invisible to the caller. No one will ever know your business is operated out of your home.

**Small Business** — Shared office space by different businesses is predominant throughout the US. With the SR Call Processor, it is possible for 3 small businesses to share the the same single-line location without having to share the same phone number. If you are a small business or single residence office your FAX, modems, dictation and answering machines may be assigned individual phone numbers.


# Safety Instructions

# 3

## Read These Instructions !!!

When using your SR Series Call Processor, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury to persons, including the following:

1. Read and understand all instructions.
2. Follow all warnings and instructions marked on the product.
3. Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for wiping off the plastic cabinet.
4. Do not use or install this product near water, for example, near a bath tub, wash bowl, kitchen sink, or laundry tub, in a wet basement, or near a swimming pool.
5. Do not place this product on an unstable cart, stand, or table. The product may fall, causing serious damage to the product.
6. This product should never be placed near or over a radiator or heat register.
7. This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your dealer or local power company.
8. This product is equipped with a three wire grounding type plug having a third (grounding) pin. This plug will only fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.
9. Do not allow anything to rest on the power cord. Do not locate this product where the cord will be abused by persons walking on it.
10. Do not overload wall outlets and extension cords as this can result in the risk of fire or electric shock.

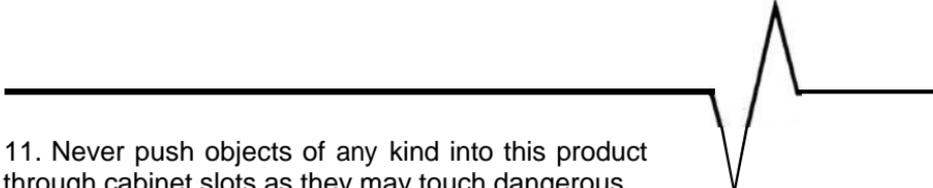- 
11. Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electric shock. Never spill liquid of any kind on the product.
  12. To reduce the risk of electric shock, do not disassemble this product, but take it to a qualified serviceman when some service or repair work is required. Opening or removing covers may expose you to dangerous voltages or other risks. Incorrect reassembly can cause electric shock when the appliance is subsequently used.
  13. Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:
    - A) When the power supply cord or plug is damaged or frayed.
    - B) If liquid has been spilled into the product.
    - C) If the product has been exposed to rain or water.
    - D) If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions because improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
    - E) If the product has been dropped or the cabinet has been damaged.
    - F) If the product exhibits a distinct change in performance.
  14. Avoid using a telephone (other than a cordless type) during an electrical storm. There may be a remote risk of electric shock from lightning.
  15. Do not use the telephone to report a gas leak in the vicinity of the leak.

**SAVE THESE INSTRUCTIONS !!!  
INSTALLATION PRECAUTIONS**

1. Never install telephone wiring during a lightning storm.
2. Never install telephone jacks in wet locations unless the jack is specially designed for wet locations.
3. Never touch uninsulated telephone wires or terminals unless the telephone line has been disconnected at the network interface.
4. Use caution when installing or modifying telephone lines.

# Installation

# 4

Your SR Call Processor, when properly installed and configured, can link together a variety of telephones and data communication products, including FAX machines, MODEMs, credit authorization terminals and answering machines.

## Proper Installation Is Important!

You probably won't be able to plug your SR in just anywhere and get the desired results. Please read the following paragraphs to better understand how to install your SR.

To understand the importance of proper installation and placement, think of your SR Call Processor as a telephone "traffic top" that supervises traffic through an intersection. Any telephones and data devices that are attached THROUGH the SR can be allowed to ring, and allowed or denied access to the telephone line.

Just as a traffic top cannot control traffic that does not pass through his intersection, your SR cannot properly control telephones and data devices that are not connected THROUGH the SR.

There are three factors to consider when choosing an installation method. They are:

1) **Which phones and data devices require ring supervision?**

Any data device that answers calls (FAX, MODEM, answering machine, etc.) should be connected THROUGH your SR. Phones that may awaken you at night should also be connected through your SR. Certain other phones may be left directly connected to the telephone line if you don't need barge-in protection.

---



## 2) Do I need barge-in protection?

If you use a data device (FAX, MODEM, etc), you should place the “BARGE-IN” switch in the “ON” position. For your SR to properly provide barge-in protection, any telephone or other device that could interrupt the call or data transfer must be connected THROUGH the SR. If barge-in protection is not required (for example, in a voice-only application at home), certain phones may be attached directly to the telephone line.

## 3) Ease and expense of changing my telephone wiring.


In most applications, a complete re-wire is not needed. Many homes are wired in a way that allows some “tricks” to make installation easier and less expensive.

Several methods of installation are described in the following pages. ***Each has advantages and limitations.***

If you feel uncomfortable at any point with the installation procedures, we recommend that you contact your dealer for assistance. You may also want to contact your telephone company or an independent installer to assist you with any wiring changes that may be necessary at your site.

## For Safety

Your telephone company has probably installed a small box called a lightning arrestor near where the telephone line comes into your building or home. Both the incoming line and the wire(s) servicing your phones and equipment are attached to this box. Under no circumstances should you disconnect or alter the wire going from this box toward the telephone company. The only wires and connections you should change are those going from this box toward your equipment.

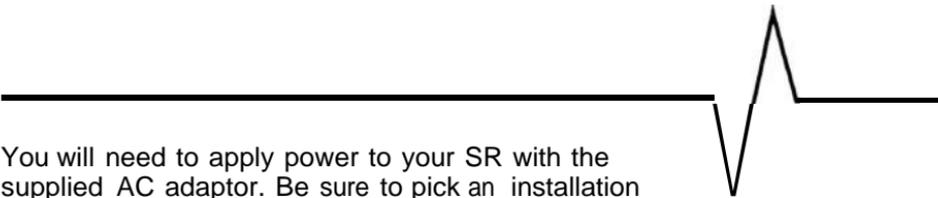

You will need to apply power to your SR with the supplied AC adaptor. Be sure to pick an installation location where a **grounded** 110VAC power outlet is nearby. You will also want to set the switch(es) on your SR for your particular application (See inside front cover).

### Initial Check Out

Please check the box and make sure you have:

- either an SR2 or SR3 Selective Ring Call Processor
- a 12 VAC Class 2 power source
- one silver modular line cord with RJ- 11 plugs on each end.
- a Warranty Registration Card

If any of these items are missing, please alert the retailer from which you purchased your SR Call Processor and also **Multi-Link, Inc.** at 1-606-885-6363.

The following installation examples describe the best ways to attach your SR to either a single or multiple line telephone. Each is described with a rating of how the installation handles ring supervision, barge-in protection, and ease/expense of installation!

**NOTE:** All installations described on the following pages assume that your existing telephones will be rung by your primary number that generates a single ring, and that your data equipment or special phones will be rung by the additional numbers that generate multiple rings. If necessary, after following these instructions, you may need to rearrange the number assignments by rearranging the DEVICE port connections on your SR.

# Single Line Installation

# 5


## A. Simple Plug-In

(one jack, no extensions)

Ring Supervision:  
Barge-in Protection:  
Install, Ease/Expense

Excellent  
Excellent  
Excellent

To Telephone Co.  
Central Office

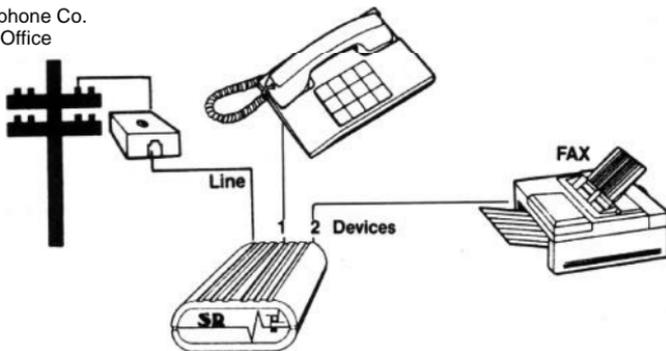

**This installation will only work if you have only one jack with no extension jacks!!!**

If you are fortunate enough to have this configuration in your home or business, take your best friend out to dinner!

1) Simply unplug whatever is in the wall jack and connect the "LINE" input of your SR to the wall jack with the supplied line cord.


2) Reattach your phone to DEVICE 1. Connect your data device to the DEVICE 2 (and 3) ports with a line cord.

## B. Wiring Modifications

Ring Supervision:  
Barge-in Protection:  
Install, Ease/Expense


Excellent  
Excellent  
Difficult

**Materials Needed:** 2 modular wall jacks, 1 line cord, station wire (perhaps).

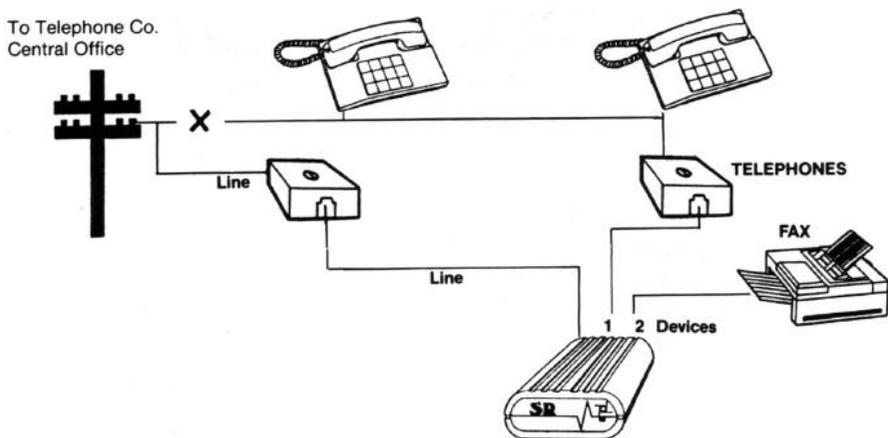

If possible, this is the best way to install your SR when you have extension telephones. Contact an installer if you need additional help.

- 1) Choose a suitable location for your SR. One good place to consider is near the point that the telephone line enters your home or building. Other good places are where existing telephone jacks are located.
- 2) Disconnect the telephone company's line from all of your existing jacks, but leave the jacks still wired to each other. This needs to be done at a point BEFORE the incoming line splits off to other extensions.

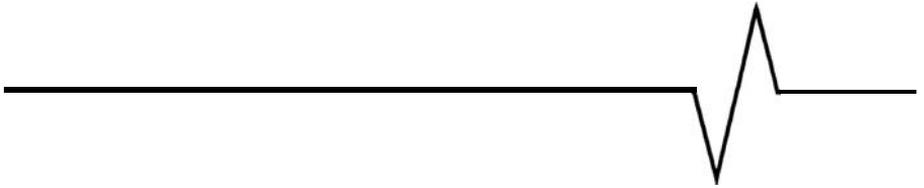

- 3) If you disconnect the incoming line from a jack, label the existing jack “TELEPHONES”. If you did not, install a jack, label it “TELEPHONES”, and connect the two wires going toward your phone equipment to the RED and GREEN terminals of this new jack.
- 4) Mount a modular jack\* at the location of your SR and connect the telephone company incoming line to the RED and GREEN terminals. It may be necessary to run additional station wire\* from the incoming line. Label this jack “LINE”.
- 5) Connect the “LINE” input of your SR to the modular wall jack marked “LINE” with the supplied line cord. Connect the wall jack marked “TELEPHONES” to the DEVICE 1 jack on your SR with a line cord.
- 6) Attach any other telephones or data equipment to the other DEVICE jacks on your SR.
- 7) If you need to attach an additional telephone to DEVICE 1 at the SR, you can use a telephone line “Y” adapter\* to allow you to plug two line cords into the DEVICE 1 jack.

\* Refer to **Recommended Parts and Materials Section**, page 22.

## C. Installation with Adapters:

(only for use in homes where only one line is used, and each jack has four wires attached)

**Ring Supervision:**

**Barge-in Protection:**


**Install, Ease/Expense**

**Excellent**

**Excellent**

**Good**


**Materials Needed:** 1 two-line splitter for each existing wall jack, 1 line cord.

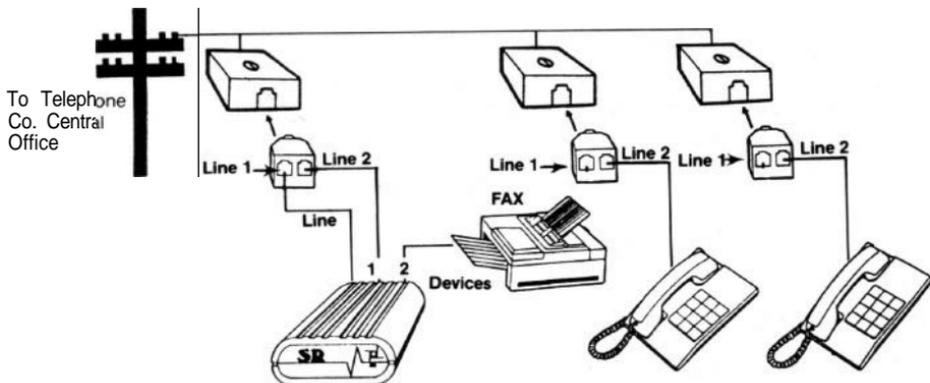

If your home has 4 or 6-wire cable to each wall jack, you can make your installation look electronically like installation B by using special 2-line (to 1-line) splitter adapters\*. The adapters will utilize an unused pair of wires in your home to connect your telephones.

- 1) Choose a location where there is an existing wall jack and where only one phone or data device will be connected BY ITSELF to a DEVICE jack. You will install your SR at this location.
- 2) Unplug anything connected to this wall jack and plug the 2-line adapter\* into the wall jack.
- 3) (READ CAREFULLY) Connect the "LINE" jack of your SR to the "LINE 1" side of the 2-line adapter with the supplied line cord.

\* Refer to [Recommended Parts and Materials Section](#), page 22

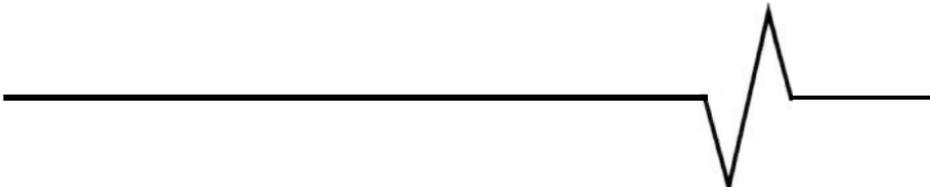

4) Connect the “DEVICE 1” jack of your SR to the “LINE 2” side of the 2-line adapter with a line cord.

5) Connect your data devices and/or other telephones to the DEVICE 2 (or 3) jacks on your SR. These devices or phones will be rung by your additional telephone number(s).

6) For each wall jack in your home, disconnect anything plugged into it. Insert a 2-line adapter and re-connect the cord to the “LINE 2” side of the adapter. If it is impractical to insert a 2-line adapter (for example, with a wall-mount telephone), convert this jack by:

a. Swapping the GREEN wire with the BLACK wire

b. Swapping the RED wire with the YELLOW wire

Then plug the phone back into the converted jack.

## D. Partial Supervision with One SR

**Ring Supervision:**

**Barge-in Protection:**

**Install, Ease/Expense**

**Fair**

**Sorry!**


**Excellent**

If left to your own devices (ha, ha; bad pun), this is the installation that you would probably stumble upon, and then call your dealer and complain that your SR doesn't work the way you wanted.

---

## Partial Supervision (cont)

To Telephone Co.  
Central Office

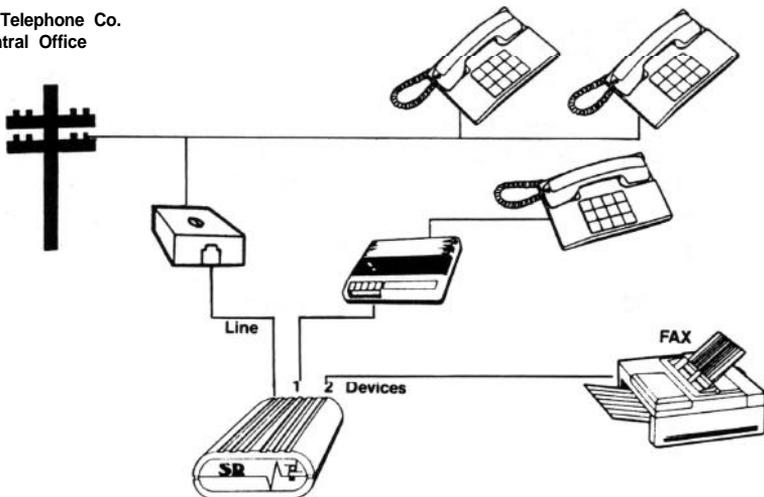

In reality, this installation is fast, easy, and works great if you don't need barge-in protection and if you don't care if your other phones ring all the time. The best application is adding a FAX, MODEM, or answering machine on the second number. The obvious drawback is that even if you turn the barge-in switch "ON" on your SR, you can still interrupt a call with your extension phones.

1) Choose a location with an existing wall jack to add your additional equipment. Unplug any cord from the wall jack. Connect the "LINE" jack of your SR to the wall jack with the supplied line cord.

2) Attach your equipment to the proper DEVICE jacks on your SR. You can also re-attach a telephone to DEVICE 1.


---

## E. Total Supervision with Multiple SR's

Ring Supervision  
Barge-in Protection:  
Install, Ease/Expense

Excellent  
Nope!  
Excellent

To Telephone Co.  
Central Office

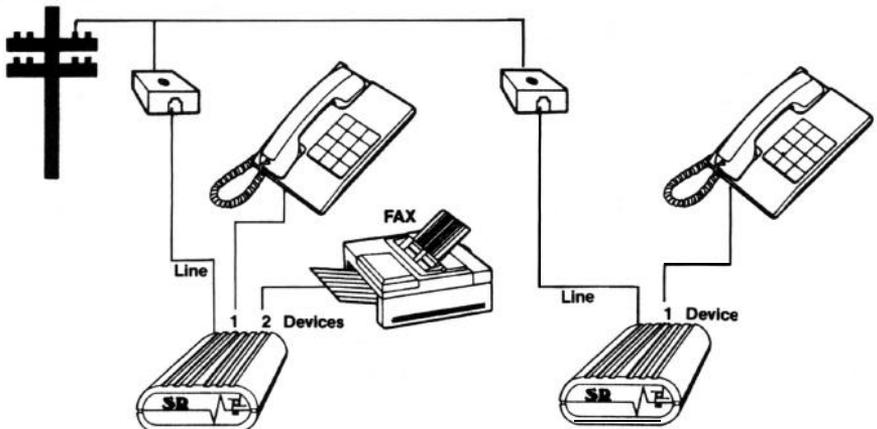

If total ring supervision is required for more than one phone, and barge-in protection is not needed, buying additional SR Call Processors may be less expensive than changing your wiring, especially if your site is wired in a user-unfriendly way, or if your extensions are in other buildings.

For EACH location where you want the phone or data device to ring on only one number:

- 1) Unplug any cord attached to the wall jack. Connect the "LINE" jack of your SR to the wall jack with the supplied line cord.
- 2) Reconnect your phone or data equipment to the proper DEVICE jack of the SR, depending on which number you want it to respond to.


# Multiple Line Installation

# 6

## A. Before a Key System

Ring Supervision:  
Barge-in Protection:  
Install, Ease/Expense

Excellent  
Excellent  
Good

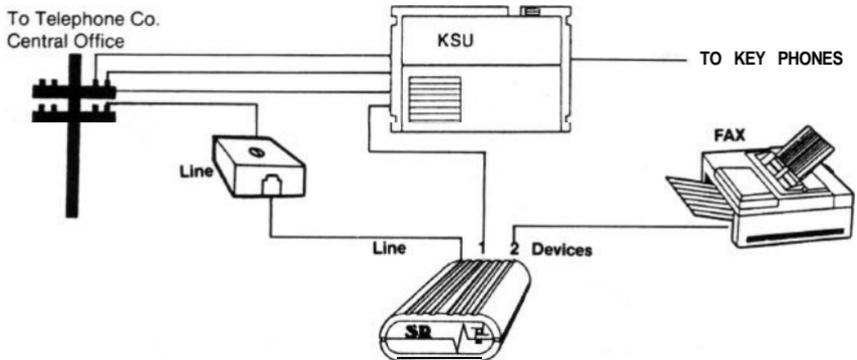

You can only install your SR on the CO\* side of the KSU. You cannot install it on the station or extension side.

- 1) Disconnect the desired line from the KSU.
- 2) Mount the SR in a convenient location near the KSU. Under two of the feet on the SR are mounting slots.
- 3) At the demarc, install an RJ-11 if one does not exist. Label it "LINE".

Attach the "LINE" jack of the SR to this RJ-11 with the supplied line cord. Shorten if desired.

\* Telephone company

4) If necessary, install an RJ-11 on the KSU side of this line. Connect the "DEVICE 1" jack to this RJ-11 with a line cord.

5) If necessary, run additional station wiring to the data devices and install modular jacks on each end. Connect the proper DEVICE jack on the SR to the close jack, and connect the data device to the far jack.

## B. RJ-14 Two Line System (no KSU)

Ring Supervision:


Barge-in Protection:

Install, Ease/Expense

Excellent

Excellent

Call an Installer!

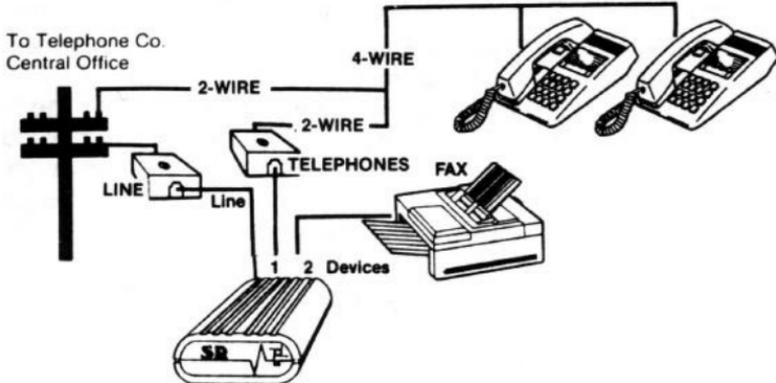


This installation scheme has been the Waterloo of many an armchair telephone man. Either you or your wiring will emerge the victor, and the odds are greatly against you! Think of your family. Save yourself the high cost of going insane and get someone who knows what they are doing to install this one for **you**.

We have provided you with a picture, so you may see how difficult the wiring configuration and installation is. Don't stress out if you don't understand it – simply show the diagram to your local telephone installer.

# Commonly Asked Questions

# 7

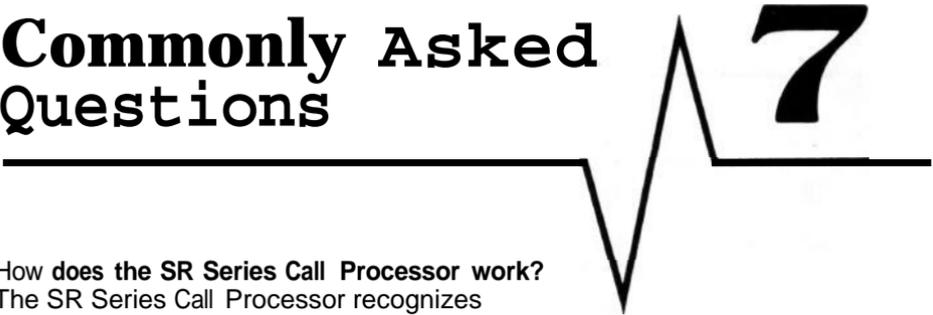

## **How does the SR Series Call Processor work?**

The SR Series Call Processor recognizes the ring pattern of incoming calls by counting the number of bursts in the pattern. Your original phone number has one long burst, your 2nd and 3rd numbers have 2 and 3 bursts, respectively. After counting the bursts, the call is routed to the phone device you have designated for answering that telephone number without ringing other phones in your home. Operation is invisible to the caller and the SR will never misdirect a call. The SR does not rely on special tones to direct calls to FAX or MODEMs.

## **Can a conversation or data transmission be interrupted by someone picking up an extension on the same line?**


Yes and no. This option is selected by the user and depends on the application. In the home, the SR Call Processor routes calls to particular phones. With the exclusion feature “on”, that particular call can only be answered on that particular phone and no other extension can “barge-in” on the conversation. With exclusion “off”, calls routed to particular phones can be answered on other extensions. In business, you should have the exclusion feature on to protect against interruption of data transmission by a FAX or MODEM.

## **How does surge suppression work?**

The SR Call processor “limits” transient voltage and lightning strikes to a safe level. Excess voltage is routed out of the ground in the SR power supply

## **Do I have to operate this device through my phone somehow?**

No. Routing is automatic. No switches to constantly reset or codes to dial in. Just designate which phones you want to ring your different telephone numbers. It’s that easy.

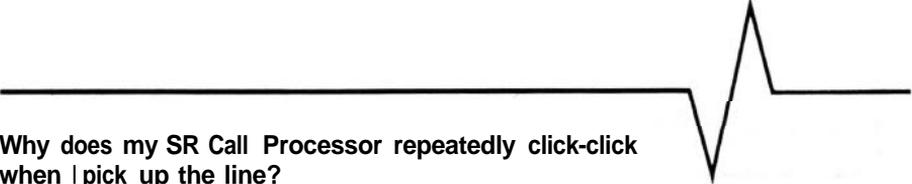

**Why does my SR Call Processor repeatedly click-click when I pick up the line?**

If you cannot get a dial tone, and only hear a click-click every two seconds or so, the SR does not have a good connection to the phone company. Check your installation and wiring for loose or open connections. Connect a single-line telephone directly to the incoming line. Check for dial tone and proper operation. A dead line should be reported to your telephone company.

**Why does my FAX answer all incoming calls?**

Your SR Call Processor may not be getting any power. Check the LED indicator on the front panel. If the LED is not lit, check the power connector, the AC adaptor, and the AC power source.

## Recommended Parts and Materials

Many electronics supply houses carry most of the parts and materials you may need to modify your site wiring for installation of your SR Series Processors. One of the most convenient of these is Radio Shack. Below is a list of materials which are recommended in the event that you need to modify your wiring. Again, if this information seems fuzzy, you may wish to get help from an independent telephone installer or contractor.

<b>Nomenclature</b>	<b>Radio Shack Part #</b>
Modular Surface Mount Wall Jack	279-420
4 Conductor Station Wire	278-372
Line Cord	279-374
Splices	64-3080
1 Line "Y" Adapter (Duplex Jack)	279-357*
2 Line Splitter (3 Way Jack)	279-402*

\*These products look similar, but are not interchangeable!

---



## Technical Specifications

Dimensions: 5" W    7 $\frac{1}{8}$ " L    2 $\frac{3}{4}$ " H

Weight: 11.2 ozs.

Shipping Weight: 2 lbs

### Input Power Requirements

At AC Transformer: 110-125 Volts AC only, 60HZ

At Power Jack on both SR models: 12-15 Volts AC only

CO Interface: REN 0.9 B

Input Ring detection: 40-150 Volts AC, 15-68 HZ

### DEVICE Interface:

Battery: Nominal - 48 Volt DC to devices 1, 2 and 3

Off-hook detection: 6 - 150 ma

Power Consumption: 1.9 Watts (Both models)

Telephone Interface: RJ11

Trunking: SR2 Model - 2 to 1

SR3 Model - 3 to 1


FCC/DOC Approved, Meets UL 1459/CSA 22.2 requirements

2 Year Warranty (US only)

## FCC Registration

This equipment complies with Part 68 and Part 15 of the FCC rules. On the bottom of this equipment is a label that contains, among other information, the FCC Registration Number and Ringer Equivalence Number (REN) for this equipment. You must, upon request, provide this information to your telephone company.

The REN is useful to determine the quantity of devices you may connect to your telephone line and still have all of those devices ring when your

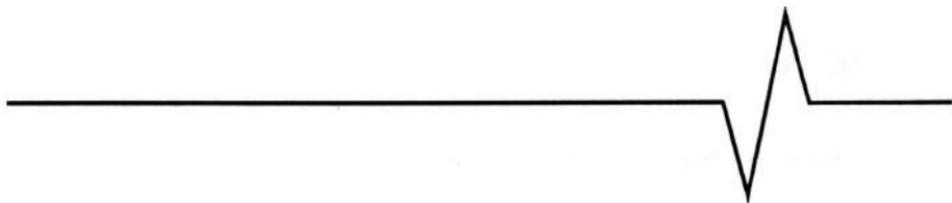

telephone number is called. In most, but not all areas, the sum of the RENs of all devices connected to one line should not exceed five (5.0). To be certain on the number of devices you may connect to your line, as determined by the REN, you should contact your local telephone company to determine the maximum REN for your calling area.


If your telephone equipment causes harm to the telephone network, the telephone company may discontinue your service temporarily. If possible, they will notify you in advance. But if advance notice is not practical, you will be notified as soon as possible. You will be informed of your right to file a complaint with the FCC.

Your telephone company may make changes in its facilities, equipment, operations or procedures that could affect the proper functioning of your equipment. If they do, you will be notified in advance to give you an opportunity to maintain uninterrupted telephone service.

If you experience trouble with this telephone equipment, please contact Multi-Link, Inc. for information on obtaining service or repairs.

The telephone company may ask that you disconnect this equipment from the network until the problem has been corrected or until you are sure that the equipment is not malfunctioning.

This equipment may not be used on coin service provided by the telephone company, and is not intended for use with party line service.

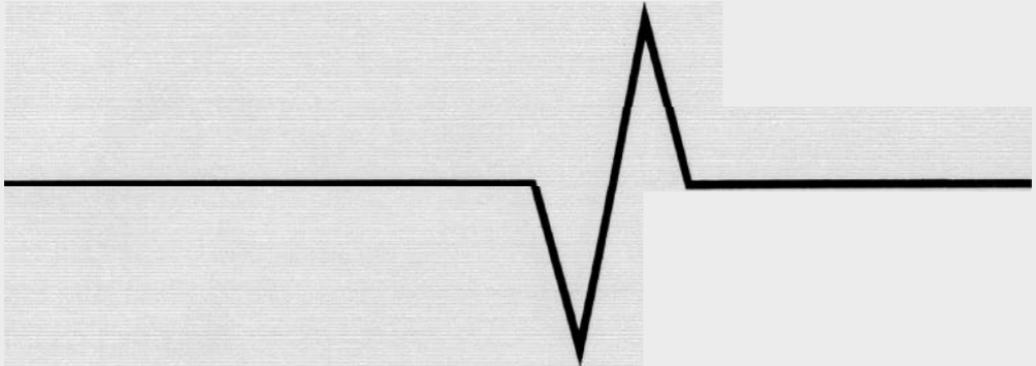

The SR Series Call Processor contains patented and otherwise proprietary circuits and software algorithms. This owner's manual describes the operation and function of some of these circuits and algorithms. Unauthorized duplication of this manual is a violation of U.S. and other copyright laws, and unauthorized use of all or part of this manual may result in patent infringement. Therefore, THIS MANUAL IS TO BE USED ONLY WITH OR AS A MARKETING TOOL FOR THE SR SERIES CALL PROCESSOR. Duplication of all or part of this manual without the permission of Multi-Link, Inc. is prohibited.

Printed in the U.S.A.

**Multi-Link, Inc.**

225 Industry Parkway  
**Nicholasville, KY 40356**  
(859) 885-6363