





www.infiniticonnections.com


CAT 5E/CAT 6 Infiniti Keystone Installation Instructions

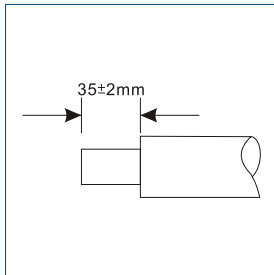


Step 1: Stripping: Use proper tool to strip LAN cable outer jacket.

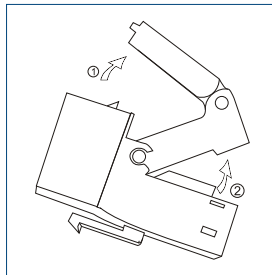


Step 2: Open wiring cap

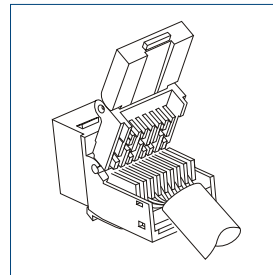


Step 3: Following color code T568A or T568B to insert all 4 pairs wire into slots on wiring cap

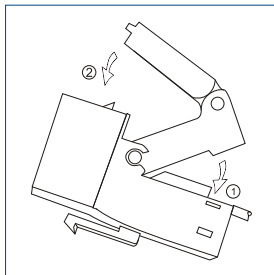

Step 4: Press down wiring cap

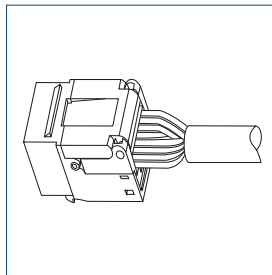

Step 5: Lock: Fold the locker 180 degree to lock the wiring cap to CAT005.

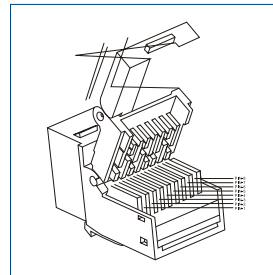

Wiring instruction.

Punch Down Terminals	T568A Wire Color
PIN-1	White/Blue
PIN-2	Blue
PIN-3	White/Green
PIN-4	Green
PIN-5	White/Orange
PIN-6	Orange
PIN-7	White/Brown
PIN-8	Brown

568A

Punch Down Terminals	T568B Wire Color
PIN-1	White/Blue
PIN-2	Blue
PIN-3	White/Orange
PIN-4	Orange
PIN-5	White/Green
PIN-6	Green
PIN-7	White/Brown
PIN-8	Brown

568B



Warning: Keystone Jack is intended for indoor use on communication loop circuits which have been isolated from the Public Switched Telephone Network.