


# Keystone Jack Installing Instruction

KJ2 series

1

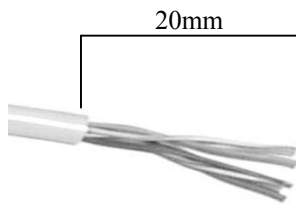

Strip approximately 20mm of the cable jacket, and separate to 4 pair each. Drain wire fold back to be shielding.


2



T568A		T568B	
Pin 5	White/Blue	Pin 5	White/Blue
Pin 4	Blue	Pin 4	Blue
Pin 1	White/Green	Pin 1	White/Orange
Pin 2	Green	Pin 2	Orange
Pin 3	White/Orange	Pin 3	White/Green
Pin 6	Orange	Pin 6	Green
Pin 7	White/Brown	Pin 7	White/Brown
Pin 8	Brown	Pin 8	Brown


Follow the direction on the color coding sticker to position T568A or T568B wiring.

3

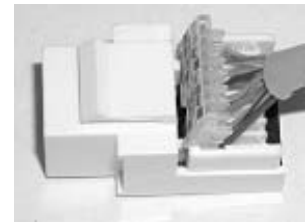

Open the plastic lid by your thumb. Insert the wires by leaning 45° into the slot ( Note: Not straight in) and each time install 1 pair ( not 4 pair ) in the same time.



4

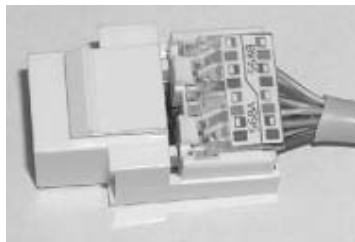

Close the plastic lid to connect the wires.


## Unshielded Type

5

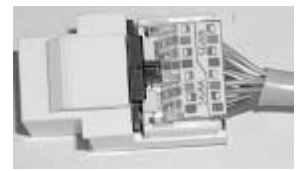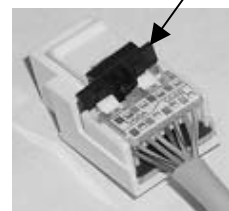

The Key-lock in order to force the plastic lid not open up.


4

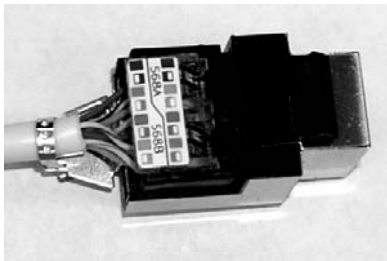

Close the plastic lid to connect the wires, hold tightly with cable jacket and drain wire by metal cable tie.

## Shielded Type

5

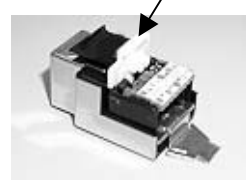

The Key-Lock in order to force the plastic lid not open up.  
( Note: The Key-Lock is not necessary for Full shield type )

6



Insert the metal cover ( Full shielded type only ) and complete the installation.